



Download and install Live Updates from Stellar Support

- Go to www.stellarsupport.com
- Select English, next to USA
- Click on Software Updates
- Click on Generation 4 Display (4600 v2/4640/4240/4200)
- Click on the yellow download now button
- Window will open with the Latest Generation 4 CommandCenter software
- Click the yellow download button
- Open the Software Manager download
 - Software Manager Setup window will come up
 - Click Next
 - Check mark the Desktop Shortcuts Box
 - Click Next
 - Click Install
 - Click Finish

Copy the updates to a USB Drive

- Once John Deere Software Manager is installed, it will automatically open
- Insert a blank USB Drive
 - Drive must be 16GB or smaller
 - Format as Fat32 if formatting a new drive
- Select the USB drive that you have inserted
- In the bottom right-hand corner, there is a (DO ALL) button, click this button and it will start the download process

Install Update via GEN4 Display

Note: It is best to unplug any Rate Controllers when doing this update to prevent any issues

- Power on the 4640 Display
- Once booted up, insert the USB on the right side of the display
- From the Pop-Up, choose Install Software
- Select –Install from USB Drive
- View Updates for Other Devices
- Select the GPS Receiver
- Version number for the GPS Receiver should be (4.40P)